Cable Carriers

Slit Type




Outer Radius Mount	Inner Radius Mount
Main Body + Flange	Main Body + Flange
SE045F	SZ045F
SE08F	SZ08F
SE14F	SZ14F
SE16F	SZ16F

- and two corresponding flanges (1 Moving End + 1 Fixed End).

 (Install the flange fixed end on the lower side, and moving end on the upper side. (Refer to the Positional Relationship in External Dimension Diagram)


 (Insert cables through slifs (openings) on the outer or inner circumference.

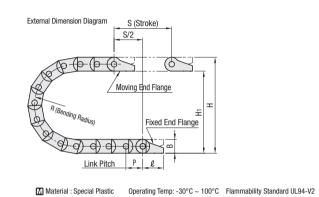


Flange Dimension Diagram

SE045F, SZ045F


<Moving Ends>

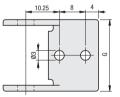

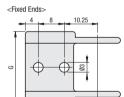


• SE16F, SZ16F


<Moving Ends>

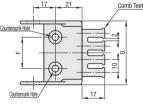


<Fixed Ends>

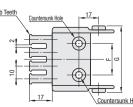

SE08F, SZ08F

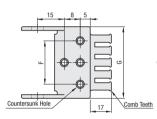

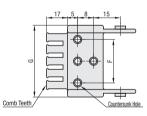



■ Detail of Countersunk Hole





SE14F, SZ14F

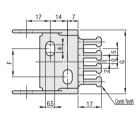

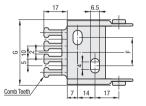

■Inserting Cables



■Removing Cables




The cable can be removed by just pulling out.

Part Numb		Bending Radius Selection		H (Mounting Height)	H ₁	HF (Paguired Physical Height)	K (Are - Mergin)	Р	В	l
Туре	No.	Selection	OI LINKS	(Mounting Height)		(Required Physical Height)	(Arc + Margin)			
050455		018	1~27	48.5	36	58.5	85			
SE045F SZ045F	16	028	1~29	68.5	56	78.5	115	13	12.5	22.3
020401		038	1~31	88.5	76	98.5	150			
05005	16 20	028	1~37	75	55	90	130			
SE08F SZ08F	30	038	1~38	95	75	110	160	20	19.3	28
02001	40 50	048	1~40	115	95	130	195			
		028	1~30	81	56	91	150			
05445	1	038	1~30	101	76	111	185			
SE14F SZ14F	2	048	1~30	121	96	131	215	30.5	25	38
02141	4	075	1~30	175	150	185	300			
		100	1~33	225	200	235	380			
05405	2	060	1~30	159	120	174	250			
SE16F SZ16F	3	075	1~30	189	150	204	300	30.5	39	38
32101	4	100	1~33	239	200	254	380			

Part Numb			1	1									Unit Price	
		Bending Radius	A	В	С	D	Е	w	F	G	Number of Comb	Weight	(One Link Unit Price x Number	
Туре	No.	Selection	^	-	•		_	•••	·	<u> </u>	Teeth	per Link (g)	of Links) + Flange Price (2 pcs.)	
SE045F SZ045F	16	018 028 038	9.4	12.5	16	-	-	23	-	22	-	1.4		
	16				16	-	-	24.2	-	24.2	2	4.8		
05005	20	028			20	-	-	28.2	-	28.2	2	5.0		
SE08F SZ08F	30	038	14.6	19.3	30	-	-	38.2	22	38.2	3	5.6		
32001	40	048			40	-	-	48.2	32	48.2	4	6.2		
	50				50	-	-	58.2	42	58.2	5	7.4		
	1	028			15	-	-	27	-	26.3	2	9.3		
SE14F	2	038 048	19	25	25	-	-	37	10	36.3	3	9.6		
SZ14F	3	046	19	25	38	-	-	50	23	49.3	4	12		
	4	100			50	-	-	62	35	61.3	5	13		
05405	2	060 075 100			23	-	-	37.5	12	35.5	3	15.5		
SE16F SZ16F	3		32	39	36	-	-	50.5	25	48.5	4	17.3		
02101	4				02		48	-	-	62.5	37	60.5	5	18.8

■Flange and Cable Securing Methods

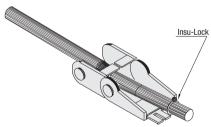

Cables are inserted in from the outer and inner circumference, and its


Mounting Direction

© Common to Mounting on the Outer and Inner Circumferences; however, can not be mounted on the outer circumference for SE045F and SZ045F.

For Moving Ends

• Mounting on the Outer Circumference

• Mounting on the Inner Circumference

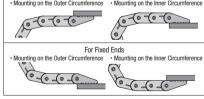

short.
It is recommended that links are selected longer by one or two links, and are adjusted (removed) at the time of

selected longer by one or two links, an are adjusted (removed) at the time of installing (removing) device.




end comb teeth are fixed in place with cable ties.


Cable Carriers

Compact Type

Cable Carriers


Flap Open-Close Type

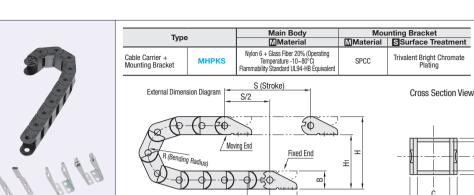


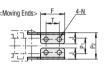

<Nn101>

<Nn202~Nn206>

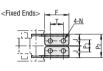

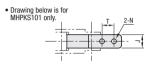

The above is a drawing of Cable Carrier assembled with 10 links and mounting brackets.

- Cable Carrier (10 Links and 1 Link) and mounting brackets are not assembled. together at the time of delivery. Link connection and brackets assembly are required for use.
- Install the mounting bracket fixed end on the lower side, and moving end on the upper side. (Refer to the Positional Relationship in External Dimension Diagram)
- Mounting bracket shape varies depending on size.

Part Numb		Bending	Number	Mounting	Cab	le C	arrie	r Din	nensi	ons		IV	lour	ntin	g Dir	nens	ions		Н		HF	V	Weight per
Part Nulli.	ei	Radius	of Links	Direction	A	В	С	w	Р	Q.	F	т	J	N	Movin	g End	Fixed	I End	(Mounting	H1	(Required Physical Height)	(Arc + Margin)	Meter (kg)
Type	No.	Selection	of Links	*	^	Р		VV	P	Ł	Г	'	J	IN	P ₁	P ₂	P ₁	P ₂	Height)		Physical Height)	(AIC + Waigili)	(Reference)
	101	19	5~25	(Common to Mounting on the Outer and Inner Circumferences)	9	12	9	16	20	18	-	8	9	3.2	-	-	-	-	50	38	62	109.7	0.105
	000	30	6~34		16	20	10	00	25	20					10.4	24.4	10.4	22.4	80	60	95	144.2	0.222
	202	45	8~36	1	10	20	10	20	25	30	20	10	10	4 =		24.4	10.4	22.4	110	90	125	191.3	0.222
MHPKS	000	30	6~34	l A	16	20	24	20	25	20	20	10	10	4.5		20.4	16.4	20.4	80	60	95	144.2	0.24
(Cable Carrier +	203	45	8~36	1	10	20	24	32	25	30					10.4	30.4	10.4	20.4	110	90	125	191.3	0.24
Mounting Brackets)	004	38	6~31	1	16	22	20	40	32	40					23.6	20.6	20	36	98	76	118	179.3	0.45
	204	50	7~32	В	10	22	29	43	32	43	200	10	14			39.0	20	30	122	100	142	217	0.45
	006	38	6~31	1	10	22	4.4	EO	20	40	32	Ιŏ	14	ე.გ	l .	EE C	36	EO	98	76	118	179.3	0 E1
	206	50	7~32	1	10	22	44	59	32	43					39.6	55.6	30	52	122	100	142	217	0.51

Part Numb	er	Bending Radius	Number	Mounting Direction	Unit Price Cable Carrier + Mounting Bracket (One Link Unit
Туре	No.		of Links	*	Price x Number of Links) + Mounting Bracket Price
	101	19	5~25	(Common to Mounting on the Outer and Inner Circumferences)	
	202	30	6~34		
	202	45	8~36		
MHPKS	000	30	6~34	A	
(Cable Carrier +	203	45	8~36		
Mounting Brackets)	004	38	6~31		
	204	50	7~32	В	
	000	38	6~31		
	206	50	7~32		

<Cautions on Model Selection>

• A Cable Carrier and suitable Mounting Brackets (Moving Ends x1 set, Fixed Ends x1 set) are in a set.

Please note that part number varies depending on outer/inner circumference mounting.














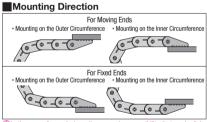


In the case of new designs, there may be a possibility that carrier links

It is recommended that links are selected longer by one or two links, and are adjusted (removed) at the time of installing (removing) device.

* Mounting Bracket Structural Components

No.		Mounting Bracket St	
NO.	Direction	For Moving Ends	For Fixed Ends
101	S (Common to Mounting on the	Common to Mounting on the	Common to Mounting on the
101	Outer and Inner Circumferences)	Outer and Inner Circumferences	
202~206	Α	Mounting on the Outer Circumference	Common to Mounting on the Outer and Inner Circumferences
202~200	В	Mounting on the Inner Circumference	Common to Mounting on the Outer and Inner Circumferences


Link Connection and Disconnection

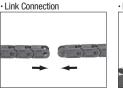

· Place links in the same direction and push from both sides to connect.



 Insert a flathead screwdriver tin between the links and pry to disconnect.

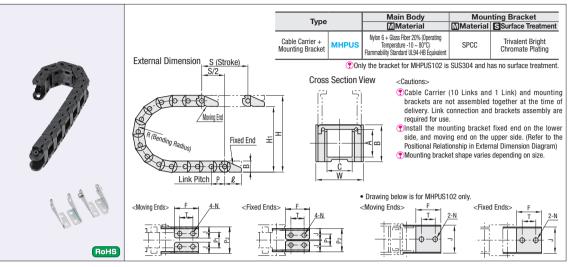

Part Numbe		Bending	Number	Mounting	Cab	le C	arrie	r Din	nensi	ions			Moi	ıntir	ng Din	nensio	ns		Н		HF	K	Weight per
Type	No.	Radius Selection	of Links	*	Α	В	С	w	Р	l	F	Т	J	N	Movin P1	g End P2	Fixed P1	End P2	(Mounting Height)	H ₁	(Required Physical Height)	(Arc + Margin)	Meter (kg) (Reference)
	102	19	5~23	S (Common to Mounting on the Outer and Inner Circumferences)	9	12	20	27	20	30	22	12	*25 (23)	4.5	-	-	-	-	50	38	65	99.7	0.12
		25	6~34																70	50	85	128.5	
	202	30	6~34		14	20	14	26	25	30					9.8	21.8	8	20	80	60	95	144.2	0.25
		45	8~36								20	10	10	4.5					110	90	125	191.3	
	203	30	6~34		14	20	20	32	25	30					15.8	27.8	14	26	80	60	95	144.2	0.26
	200	45	8~36		14	20	20	32	23	30					13.0	21.0	14	20	110	90	125	191.3	0.20
	204	38	6~36		14	22	20	40	32	43					17.4	33.4	14	30	98	76	118	179.3	0.5
MHPUS		50	7~37		<u></u>				U-		32	18	14	5.8		00.1			122	100	142	217	0.0
(Cable Carrier +	206	38	6~36	Α	14	22	40	60	32	43	02			0.0	37.4	53.4	34	50	98	76	118	179.3	0.56
Mounting Brackets)		50	7~37																122	100	142	217	
mounting brackets)	306	50	6~38	В	24	34	44	60	45	60	40	24	20	7	35.6	55.6	32	52	134	100	160	257	0.64
		100	10~42	В		-										00.0			234	200	260	414	
		50	6~38																140	100	170	257	
	408	75	8~40		24.5	40	58	78	45	60	40	24	22	7	44	72	40	68	190	150	220	335.5	1.1
		100	10~42 13~45																240 340	200 300	270 370	414 571	
	<u> </u>	50	6~38																140	100	170	257	
	412				24.5	40	97	117	45	60	40	24	22	7	83	111	79	107			220		1.3
	412	75 100	9~41 10~42		24.5	40	9/	117	45	00	40	24	22	1	03	111	79	107	190 240	150 200	270	335.5 414	1.3
	I	1 100	110~42	l															240	200	1 2/0 1	414	

Part Number	er	Bending	Number	Mounting Direction	Unit Price
Туре	No.	Radius Selection	of Links	*	Cable Carrier + Mounting Bracket (One Link Ur Price x Number of Links) + Mounting Bracket Pr
	102	19	5~23	S (Common to Mounting on the Outer and Inner Circumferences)	
		25	6~34		
	202	30	6~34		
		45	8~36	1	
	203	30	6~34		
	200	45	8~36		
	204	38	6~36		
MUDUIC		50	7~37		
MHPUS (Cable Carrier +	206	38	6~36	Α	
Mounting Brackets)		50	7~37		
	306	50	6~38	В	
		100	10~42	_	
		50	6~38		
	408	75	8~40		
		100	10~42		
		150	13~45		
		50	6~38		
	412	75	9~41		
		100	10~42	l	

• A Cable Carrier and suitable Mounting Brackets (Moving Ends x1 set, Fixed Ends x1 set) are in a set.

Please note that part number varies depending on outer/inner circumference mounting.



* () indicates Fixed End dimensions Mounting Direction

For Moving Ends Mounting on the Inner Circumferen



For Fixed Ends



In the case of new designs, there may be a possibility that carrier links

It is recommended that links are selected longer by one or two links, and are adjusted (removed) at the time of installing (removing) device.

* Mounting Bracket Structural Components

WOULL	ing bracket	Structural C	omponenta			
No.		Mounting Bracket St	ructural Components			
NO.	Direction	For Moving Ends	For Fixed Ends			
102	S	Common to Mounting on the	Common to Mounting on the			
102	(Common to Mounting on the Outer and Inner Circumferences)	Outer and Inner Circumferences	Outer and Inner Circumferences			
202~206	Α	Mounting on the Outer Circumference	Common to Mounting on the Outer and Inner Circumferences			
202~200	В	Mounting on the Inner Circumference	Common to Mounting on the Outer and Inner Circumferences			
306~412	A	Common to Mounting on the Outer and Inner Circumferences				
306~412	R	Common to Mounting on the	Mounting on the loner Circumference			




• To open the flap, insert the tip

of a flathead screwdriver into

the side window and pry. To close the flap, push down.



• Open link flaps, mate the push the both ends to joint fit

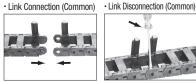


 Open the link flaps, insert and push down a flathead screwdriver in a gap between

Cable Carriers

Flap Open-Close Full Cover Type

Cable Carriers - Low Particle Generation, Low Noise

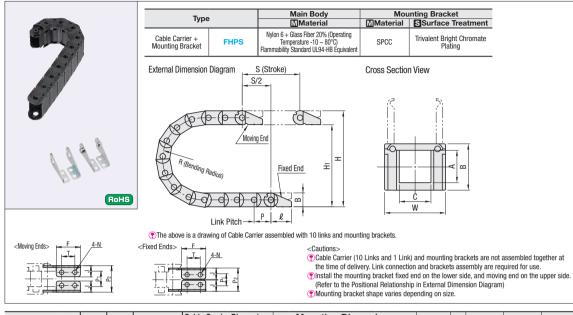

Part Numb		D dia	Mk	Mounting	Cab	le Ca	arrie	r Dim	nensi	ons		M	loui	ntin	g Dir	nens	ions		Н		HF	K	Weight per
Part Nullib	ei		Number of Links	Direction	Α	В	С	w	Р	Q.	F	т		N	Movin	g End	Fixed	I End	(Mounting			(Arc +	Meter (kg)
Туре	No.	naulus	OI LIIKS	*	A	В	C	vv	г	Ł	г	'	J	IN	P ₁	P ₂	P ₁	P ₂	Height)		Physical Height)	Margin)	(Reference)
	202	30	8~43		13	20	14	26	20	30	20	10	10	4.5	9.8	21.8	8	20	80	60	95	144.2	0.28
	203	30	8~43		13	20	20	32	20	30	20	10	10	4.5	15.8	27.8	14	26	80	60	95	144.2	0.31
	204	38	7~34	_	13	22	22	40	26	43					18.6	34.6	15	31	98	76	118	179.3	0.5
FHPS	206	38	7~34	A	13	22	40	60	26	42	32	18	14	5.8	38.6	54.6	35	51	98	76	118	179.3	0.6
(Cable Carrier +	200	50	9~36		13	22	42	טט	20	43					30.0	54.0	33	01	122	100	142	217	0.0
Mounting Brackets)	400	70	8~45	В	25	40	EO	78	A.E.	eo.	40	0.4	22	7	44	72	40	68	180	140	210	319.8	1.36
	408	100	10~47		20	40	00	10	40	טט	40	24	22	<i>'</i>	44	12	40	00	240	200	270	414	1.30
	412	70	8~45		25	40	07	117	15	60	40	24	22	7	83	111	79	107	180	140	210	319.8	1.7
	412	100	11~49		25	40	97	117	45	טט	40	24	22	'	03	1111	79	107	240	200	270	414	1.7

Part Numb	er	Bending Radius	Number	Mounting Direction	Unit Price Cable Carrier + Mounting Bracket (One Link Unit
Type	No.	Selection	of Links	*	Price x Number of Links) + Mounting Bracket Price
	202	30	8~43		
	203	30	8~43		
	204	38	7~34		
FHPS	206	38	7~34	A	
(Cable Carrier +	200	50	9~36		
Mounting Brackets)	400	70			
	408	100	10~47		
	412	70	8~45		
	412	100	11~49		

- <Cautions on Model Selection>
- A Cable Carrier and suitable Mounting Brackets (Moving Ends x1 set, Fixed Ends x1 set) are in a set.
- Please note that part numbers vary depending on inner/outer circumference mounting.

Ordering	Part Number FHPS204	-	Bending Radius	-	Number of Links	-	Mounting Direction
Example	FHPS204	-	38	-	12	-	Α

For Fixed Ends unference • Mounting on the Inner Circu

For Moving Ends

■Mounting Direction

* Mounting Bracket Structural Components

No.		Mounting Bracket Structural Components								
NO.	Direction	For Moving Ends	For Fixed Ends							
202~206	Α	Mounting on the Outer Circumference	Common to Mounting on the Outer and Inner Circumferences							
202~206	В	Mounting on the Inner Circumference	Common to Mounting on the Outer and Inner Circumferences							
408, 412	Α		Mounting on the Outer Circumference							
400, 412	В	Common to Mounting on the	Mounting on the Inner Circumference							

Flap Opening and Closing




Flaps are laid on one another.
Insert a flathead screwdriver in the side window and pry the flap to open. Start with the top flap.

- Link Connection (Common)



cks
Open the link flaps, insert
and push down a flathead
screwdriver in a gap between
the links to disconnect.

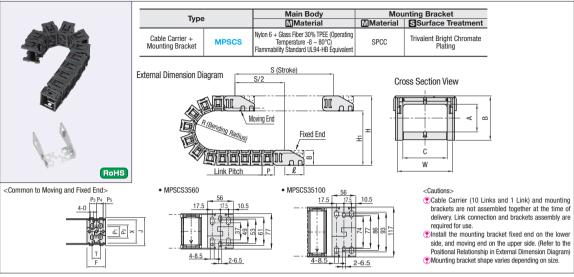


Port Numb	Part Number Bending		Bending Number Mounting		Cab	Cable Carrier Dimensions Mounting Dimensions										Н		HF	K	Weight per																				
Type		Radius Selection	Number of Links		Α	В	С	w	Р	l	F	Т	J	х	D	Applicable Screw (D)	P1	P ₂	Рз	P4	P 5	(Mounting Height)		(Required Physical Height)	(Arc + Margin)	Meter (kg) (Reference														
	1520	28	8~67		15	25	20	20	18	29	22	10	22.0	30.4	4.2	M4	12	15	8	8	3	95	70	115	128.6	0.34														
	1520	34	9~68		15	23	20	20	10	0 29 2		22 10		30.4	4 4.2	IVI	12	13				105	80	125	144.3	0.54														
		31	8~77					50											1			115	82	145	150.4															
	2040	38	9~78	S	20	33	40		20	35	26	14	54.8 52.	52.4	6.5	M6	21	27				130	97	160	174	0.7														
		58	12~81																	170	137	200	236.8																	
MPSCS	2540	60	9~57			(Common to	(Common to	(Common to	(Common to	(Common to	(Common to	(Common to	(Common to	(Common to	(Common to	(Common to	(Common to	(Common to	(Common to	25	40	40	EO	20	E0 E			EG A	53.2		M6	21	40				185	145	215	251.5
(Cable Carrier +	2540	85	11~60	Mounting on the	1	40	40	50	30	52.5			30.4	33.2	7	, IVIO	21	40		١.		235	195	265	330	0.77														
Mounting Brackets)	2560	60		Outer and Inner		40	60	70	30	52.5	40 24		76.4	6.4 73.2	2 ' 🗀	M6	35.4		1 -	-	-	185	145	215	251.5	0.94														
	2580	60	9~57	Circumferences)	25	40	80	90	30	52.5			96.4	93.2		M6	60	75.2				185	145	215	251.5	1.2														
	3560	75	8~51		25	55	60	72	45	60 E												240	185	270	323.9	1.4														
	3300	100	10~53		33	55	00	13	40	00.0							_	١.				295	240	325	410.2	1.4														
	35100	75	8~47		25		100	110	45	C0 E		_		-	-							240	185	270	323.9	2														
	35100	100	10~49		აა	ວວ	100	113	43	00.0												295	240	325	410.2	2														

Part Number		Bending Radius	Number of Links	Mounting Direction	Unit Price Cable Carrier + Mounting Bracket (One Link Unit
Type	No.	Selection	OI LINKS		Price x Number of Links) + Mounting Bracket Price
	1520	28	8~67		
	1320	34	9~68	1	
		31	8~77	1	
	2040	38	9~78	S (Common to Mounting on the Outer and Inner	
		58	12~81		
MPSCS	2540	60	9~57		
(Cable Carrier +	2040	85	11~60		
Mounting Brackets)	2560	60	9~57	Circumferences)	
	2580	60	9~57		
	3560	75	8~51		
	3360	100	10~53]	
	35100	75	8~47	1	
	30100	100	10~49	1	

<Cautions on Model Selection>

• A Cable Carrier and suitable Mounting Brackets (Moving Ends x1 set, Fixed Ends x1 set) are in a set.

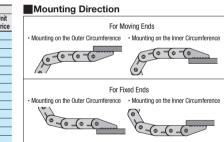


• In the case of new designs, there may be a possibility that carrier links run short.

It is recommended that links are selected longer by one or two links, and are adjusted (removed) at the time of installing (removing) device.




Low Particle Generation, Low Noise Cable Carriers (MPSCS) - Link Connection

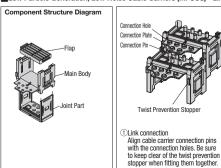



②Insert the cable carrier in the main body Be sure that the connection plate is fully mated with the cable carrier.

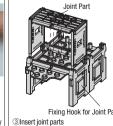


Insert joint parts
Insert the joint part into the cable
carrier to align joint part connection
holes with the connection pins.



Confirm the connection
 Please be sure if there is no gap
 between the joint parts and the
 cable carrier, and if the joint parts
 mounting hooks are secure.

Low Friction, Low Noise Type

Cable Carrier Supporter Channels

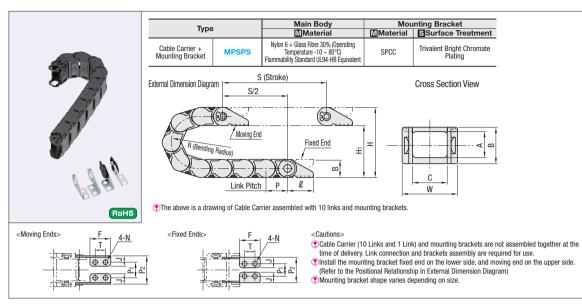

Part Number		Bending	Number	Mounting	Cab	le Ca	arrier	r Dim	nensi	ions	Мо	unt	ing	Din	nensi	ions	Н		HF	K	Weight per
Туре	No.	Radius Selection		Direction	Α	В	С	w	Р	l	F	т	J	N	P ₁	P ₂	(Mounting Height)		(Required Physical Height)	(Arc + Margin)	Meter (kg) (Reference)
	1520	30	7~55		15	21	20	22	25	5 30	20	10	10	15	15/10\	27 2/24 ()	81	60	100	154.2	0.36
	1520	50	9~57	1	15	21	20	32	25	30	20	10	10	4.5	10(12)	21.2(24.4)	121	100	140	217	0.30
	2035	45	7~45	s	20	26	35	47	32	35	26	14	15	7	27(24)	44(40)	116	90	140	211.3	0.5
		50	8~51			35	50	65	36		5 40						135	100	160	257	0.86
MPSPS	2550	75	10~53							55					40(35.4)	60.6(56)	185	150	210	333.5	
(Cable Carrier +		100	12~55									24	20	7			235	200	260	414	
Mounting Brackets)		60	8~49	Circumferences)		40	24	20	′			155	120	180	288.4						
	2585	75	9~50			5 35	85	100	43.5	55					75(70.4)	95.6(91)	185	150	210	335.5	1.05
		100	11~52]													235	200	260	414	
	3580	100	8~43]	35	50	RΠ	101	62.5	65	40	2/	20	7	70(65)	03 8(88)	250	200	280	440	1.76

Unit Price Number Mounting Radius Cable Carrier + Mounting Bracket (One Link Unit of Links Direction Price x Number of Links) + Mounting Bracket Price Type 9~57 45 7~45 8~51 10~53 (Common to Mounting 100 12~55 (Cable Carrier + Mounting Brackets on the Outer and Inner Circumferences) 8~49 60 9~50 11~52

8~43

<Cautions on Model Selection>

(?)() indicates Fixed End dimensions

• A Cable Carrier and suitable Mounting Brackets (Moving Ends x1 set, Fixed Ends x1 set) are in a set.

10~45

For Moving Ends For Fixed Ends Mounting on the Outer Circumference • Mounting on the Inner Circumference

Mounting Direction

In the case of new designs, there may be a possibility that carrier links

It is recommended that links are selected longer by one or two links, and are adjusted (removed) at the time of installing (removing) device.






To open the flap, insert a flathead screwdriver into the side window and pry. To close the flap, push it down.




first, then push the entire links from

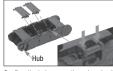

Open flaps and remove the R cap of the connecting links. Insert the hub side Confirm the hub connection, place back the removed R cap to fit the groove on the cable carrier, and restore flaps.



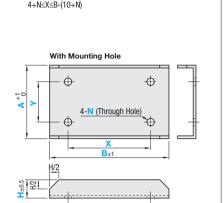

<Machining Conditions>

Part Number	A Selection	В	н	Х	Υ	N
Туре	A Selection	5mm Increment	П	1mm In	Selectable (Hole Dia.)	
	40				10~20	
CBC	50]			10~30] _
CBC CBCS	60]	10		10~40	6
CBCH	70	200~1000		10~984	10~50	1 6
	80]	20		10~60	1 11
CBCSH	90]			10~70	1
	120]			10~100	1





	_	Unit Price										
Α	В	CBC	CBCS	СВСН	CBCSH							
	200~395											
40	400~695											
	700~1000											
	200~395											
50	400~695											
	700~1000											
	200~395											
60	400~695											
	700~1000											
	200~395											
70	400~695											
	700~1000											
	200~395											
80	400~695											
	700~1000											
	200~395											
90	400~695											
	700~1000											
	200~395											
120	400~695											
	700~1000											

